



# EP-61LXA-M

**A Pentium® II Processor based AGP  
mainboard**

## **TRADEMARK**

All products and company names are trademarks or registered trademarks of their respective holders.

*These specifications are subject to change without notice.*

*Manual Revision 2.3  
February 10, 1998*

## **Technical Support Services**

If you need additional information, help during installation or normal use of this product, please contact your retailer. If your retailer can not help, you may E-Mail us with any questions at the following address [tech@epox.com](mailto:tech@epox.com).

Record your serial number before installing your EP-61LXA-M mainboard. (the serial number is located near the ISA slots at the edge of the board)

***EPoX EP-61LXA-M serial number:***

\_\_\_\_\_

## **BIOS Upgrades**

Please use either our Web Site or BBS for current BIOS Upgrades.

### **Internet Access**

<http://www.epox.com>  
[sales@epox.com](mailto:sales@epox.com)  
[tech@epox.com](mailto:tech@epox.com)

### **Modem Access**

886-2-2247-2742 (Taiwan)  
31-182-618451 (The Netherlands)

You can access this number via a Hayes-compatible modem with a 2,400 to 28,800 baud rate. The following setup format is required:

8 Data Bits, No Parity, 1 Stop Bit

If your modem is unable to connect at higher baud rates, try connecting at 2,400 baud before contacting Technical Support.

***Thank you for using EPoX mainboards!***

© Copyright 1997 EPoX Computer Company. All rights reserved.

### User Notice

---

No part of this product, including the product and software may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the express written permission of EPoX Computer Company (hereinafter referred to as EPoX) except documentation kept by the purchaser for backup purposes.

EPoX provides this manual "as is" without warranty of any kind, either express or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall EPoX be liable for any loss or profits, loss of business, loss of use or data, interruption of business or for indirect, special incidental, or consequential damages of any kind, even if EPoX has been advised of the possibility of such damages arising from any defect or error in the manual or product. EPoX may review this manual from time to time without notice. For updated BIOS, drivers, or product release information you may visit EPoX's home page at: <http://www.epox.com>

Products mentioned in this manual are mentioned for identification purposes only. Product names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies.

**The product name and revision number are both printed on the mainboard itself.**

### Handling Procedures

**Static electricity can severely damage your equipment.** Handle the EP-61LXA-M and any other device in your system with care and avoid unnecessary contact with system components on the mainboard.

Always work on an antistatic surface to avoid possible damage to the motherboard from static discharge.

We assume no responsibility for any damage to the EP-61LXA-M mainboard that results from failure to follow installation instructions or failure to observe safety precautions.



#### CAUTION



**The EP-61LXA-M mainboard is subject to damage by static electricity. Always observe the handling procedures.**

---

**Table of Contents**

---

<b>Section 1</b>	<b>Introduction</b>	
	Components Checklist .....	1-1
	<b>Overview</b>	
	Pentium II .....	1-2
	S.E.C. Cartridge Terminology .....	1-3
	Accelerated Graphics Port .....	1-4
	Hardware Monitoring .....	1-4
	Desktop Management Interface .....	1-4
	EP-61LXA-M Form-Factor .....	1-5
	I/O Shield Connector .....	1-6
	Power-On/Off (Remote) .....	1-6
	System Block Diagram .....	1-7
<b>Section 2</b>	<b>Features</b>	
	EP-61LXA-M Features .....	2-1
<b>Section 3</b>	<b>Installation</b>	
	EP-61LXA-M Detailed Layout .....	3-1
	<b>Easy Installation Procedure</b>	
	Configure DIP Switch .....	3-2
	System Memory Configuration .....	3-3
	Installing a Pentium® II Processor .....	3-6
	Device Connectors .....	3-8
<b>Section 4</b>	<b>Award BIOS Setup</b>	
	BIOS Instructions .....	4-1
	Standard CMOS Setup .....	4-2
	BIOS Features Setup .....	4-3
	Chipset Features Setup .....	4-8
	Power Management Setup .....	4-13

PNP/PCI Configuration .....	4-17
Load Setup Defaults .....	4-19
Integrated Peripherals .....	4-19
Change Supervisor or User Password .....	4-24
IDE HDD Auto Detection .....	4-24
HDD Low Level Format .....	4-27
Save & Exit Setup .....	4-27
Exit Without Saving .....	4-27

**Section 5      DMI**

DMI Access .....	5-1
------------------	-----

**Section 7      Appendix**

**Appendix A**

Memory Map .....	A-1
I/O Map .....	A-1
Timer & DMA Channels Map .....	A-2
Interrupt Map .....	A-2
RTC & CMOS RAM Map .....	A-3

**Appendix B**

POST Codes .....	A-4
Unexpected Errors .....	A-7

**Appendix C**


Load Setup Defaults .....	A-8
---------------------------	-----

## Section 1

### INTRODUCTION

#### Components Checklist

- ✓ A (1) EP-61LXA-M mainboard
- ✓ B (1) EP-61LXA-M user's manual
- ✓ C (1) Floppy ribbon cable
- ✓ D (1) Hard drive ribbon cable
- E (1) Heatsink Support Unit (optional)
- F (1) PS/2 to AT keyboard connector adapter (optional)
- ✓ G (1) Bus master drivers
- H (1) DMI (optional)

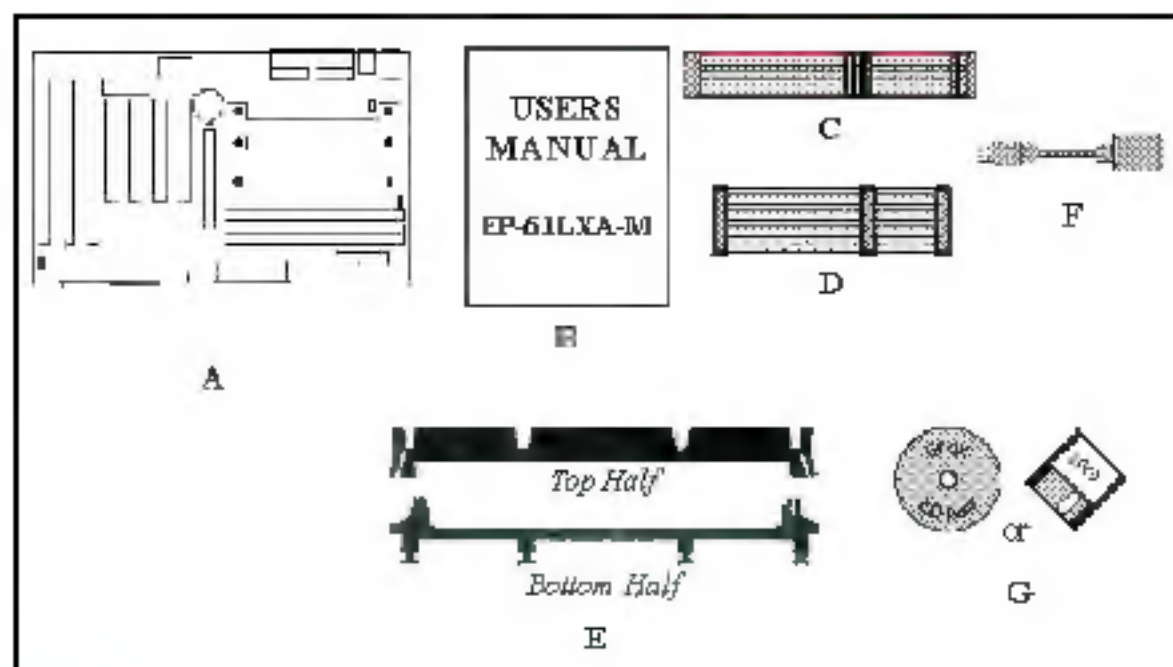

## Overview

---

### Pentium II

---

The Pentium® II Processor is the follow-on to the Pentium® Processor. The Pentium® II Processor, like the Pentium® Pro processor, implements a Dynamic Execution micro-architecture -- a unique combination of multiple branch prediction, data flow analysis, and speculative execution. This enables the Pentium® II Processor to deliver higher performance than the Pentium® processor, while maintaining binary compatibility with all previous Intel architecture processors.

A significant feature of the Pentium® II Processor, from a system perspective, is the built-in direct multiprocessing support. In order to achieve multiprocessing, and maintain the memory and I/O bandwidth to support it, new system designs are needed. For systems with dual processors, it is important to consider the additional power burdens and signal integrity issues of supporting multiple loads on a high speed bus. The Pentium® II Processor card supports both uni-processor and dual processor implementations.

The Pentium® II Processor utilizes Single Edge Contact (S.E.C.) (Figure 1) cartridge packaging technology. The S.E.C. cartridge allows the L2 cache to remain tightly coupled to the processor, while maintaining flexibility when implementing high performance processors into OEM systems. The second level cache is performance optimized and tested at the cartridge level. The S.E.C. cartridge utilizes surface mounted core components and a printed circuit board with an edge finger connection. The S.E.C. cartridge package introduced on the Pentium® II Processor will also be used in future Slot 1 processors.

The S.E.C. cartridge has the following features: a thermal plate, a cover and a PCB with an edge finger connection. The thermal plate allows standardized heatsink attachment or customized thermal solutions. The thermal plate enables a reusable heatsink to minimize fit issues for serviceability, upgradability and replacement. The full enclosure also protects the surface mount components. The edge finger connection maintains socketability for system configuration. The edge finger connector is denoted as 'Slot 1 connector' in this and other documentation.

The entire enclosed product is called the Pentium® II Processor. The packaging technology and each of the physical elements of the product are referred to using accurate technical descriptions. This allows clear reference to the products as just a




processor. This is the model used in past packaging technologies like PGA, TCP, PQFP, DIP, etc.

### **S.E.C. Cartridge Terminology**

- **Pentium® II Processor**  
The new enclosed card packaging technology is called a "Single Edge Contact cartridge." This is similar to previous names for packaging technology such as PGA or TCP.
- **Processor card**  
The green PCB (with or without components on it)
- **Processor core**  
The silicon on the PLGA package on the PCB
- **Cover**  
The plastic cover on the opposite side from the thermal plate
- **Slot 1**  
The slot that the S.E.C. cartridge plugs into, just as the Pentium® Pro processor uses Socket 3
- **Retention mechanism**  
Formerly "retention module" the dual posts, etc. that holds the cartridge in place.
- **Thermal plate**  
The heatsink attachment plate.
- **Heat sink supports**  
The support pieces that are mounted on the mainboard to provide added support for heatsinks.

The L2 cache (TagRAM, PBRAM) components keep standard industry names.

The Pentium® II Processor is the first product to utilize the S.E.C. cartridge technology and Slot 1 connector. Unless otherwise noted, any references to "Pentium® II Processor," "Pentium® II Processor/Slot 1 processor" or "Processor" will apply to both the Pentium® II Processor desktop processors.

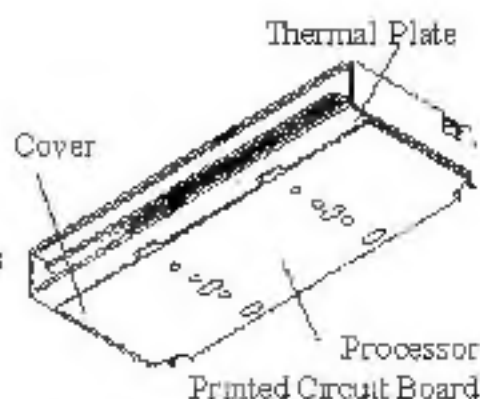

*Figure 1. Pentium® II Processor CPU with S.E.C. Cartridge*



## **Accelerated Graphics Port (AGP or A.G.P.)**

---

Typically, 3D graphics rendering requires a tremendous amount of memory, and demands ever increasing throughput speed as well. As 3D products for the personal computer become more and more popular, these demands will only increase. This will cause a rise in costs for both end users and manufacturers. Lowering these costs as well as improving performance is the primary motivation behind AGP. By providing a massive increase in the bandwidth available between the video card and the processor, it will assist in relieving some of these pressures for quite sometime.

## **Hardware Monitoring**

---

Hardware monitoring allows you to monitor various aspects of your systems operations and status. These include features such as CPU temperature, voltage and fan RPM's.

## **Desktop Management Interface (DMI)**

---

DMI, or Desktop Management Interface, is a BIOS level method for monitoring specific BIOS related hardware features. It allows the BIOS to collect and store information specific to the system, so that vendors and system integrators will have greater access to information regarding system configuration and design. This allows for better troubleshooting, migration planning, and upgradability decision making.

## EP-61LXA-M Form-Factor

The EPoX EP-61LXA-M is designed with ATX form factor - the latest industry standard of chassis. The ATX form factor is essentially a Baby-AT baseboard rotated 90 degrees within the chassis enclosure and a new mounting configuration for the power supply. With these changes the processor is relocated away from the expansion slots, allowing them all to hold full length add-in cards. ATX defines a double height aperture to the rear of the chassis which can be used to host a wide range of onboard I/O. Only the size and position of this aperture is defined, allowing PC manufacturers to add new I/O features (e.g., TV input, TV output, joystick, modem, LAN, audio, etc.) to systems. This will help systems integrators differentiate their products in the marketplace, and better meet your needs.

- By integrating more I/O down onto the board and better positioning the hard drive and floppy connectors material cost of cables and add-in cards is reduced.
- By reducing the number of cables and components in the system, manufacturing time and inventory holding costs are reduced and reliability will increase.
- By using an optimized power supply, it's possible to reduce cooling costs and lower acoustical noise. An ATX power supply, which has a side-mounted fan, allows direct cooling of the processor and add-in cards making a secondary fan or active heatsink unnecessary in most system applications.


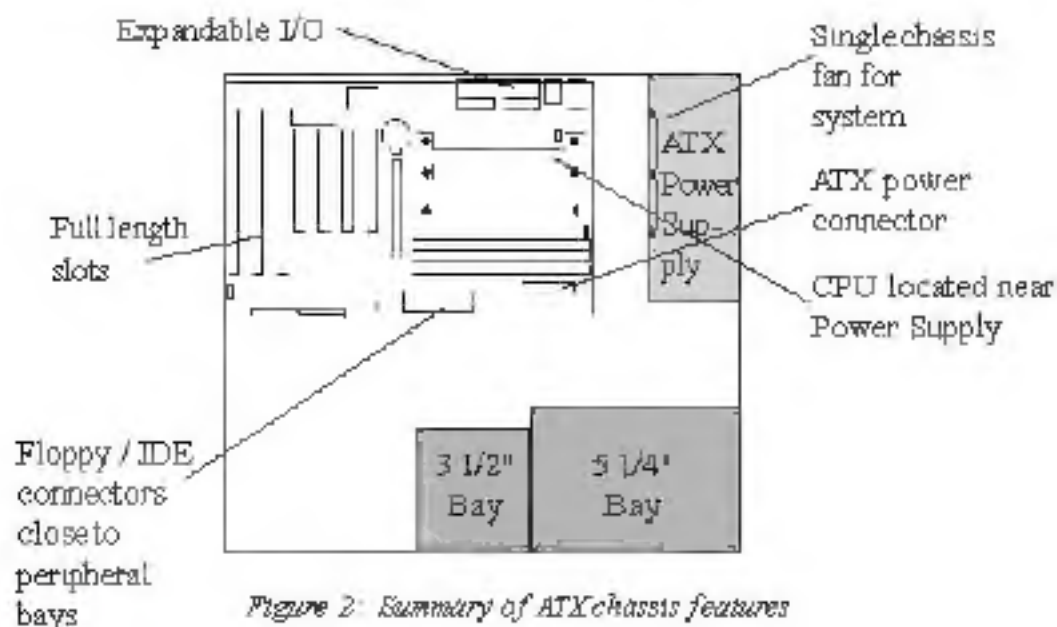


Figure 2: Summary of ATX chassis features

## I/O Shield Connector

The EP-61LXA-M is equipped with an I/O back panel. Please use the appropriate I/O shield (figure 3).

Figure 3  
EP-61LXA-M  
I/O back  
panel layout

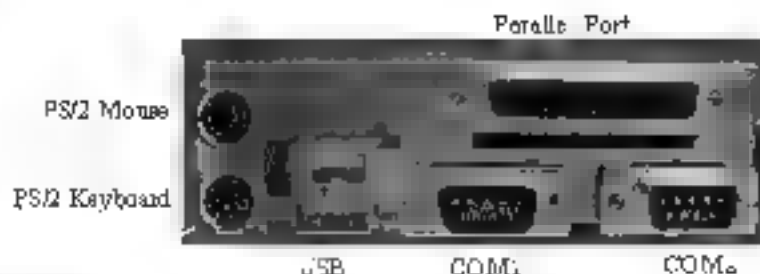

## Power-On/Off (Remote)

The EP-61LXA-M has a single 20-pin connector for ATX power supplies. For ATX power supplies that support the **Remote On/Off** feature, this should be connected to the systems front panel for system Power On/Off button. The systems power On/Off button should be a momentary button that is normally open.

The EP-61LXA-M has been designed with "Soft Off" functions. You can turn Off the system from one of two sources. The first is the front panel Power On/Off button, and the other is the "Soft Off" function (coming from the EP-61LXA-M's onboard circuit controller) that can be controlled by the operating system. Windows 95 will control this when the user clicks that they are ready to Shutdown the system.

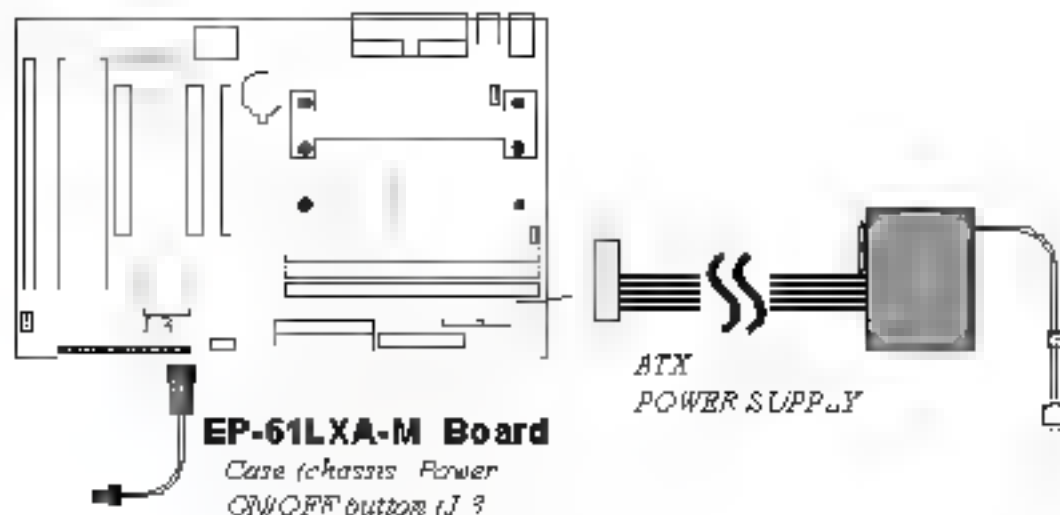


Figure 4 Simple ATX Power On/Off Controller

## System Block Diagram

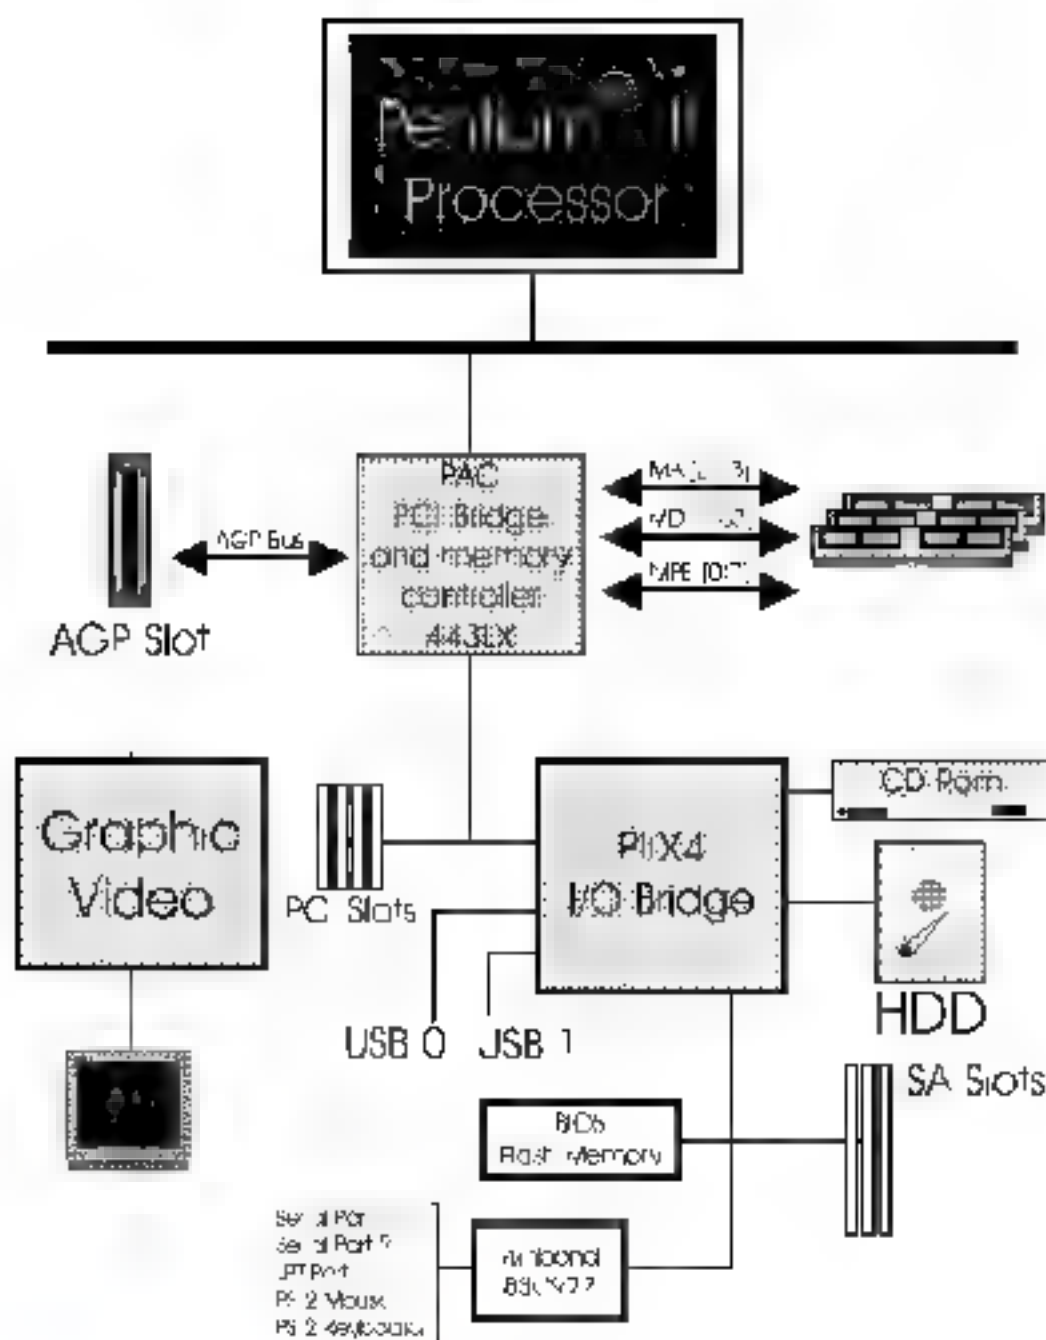


Figure 1 System Block Diagram

**Section 2**  
**FEATURES**

---

**EP-61LXA-M Features:**

---

- EP-61LXA-M is based on the Pentium® II Processor operating at 233 ~ 333 MHz on Slot 1. The board is configured by an DIP Switch to match your CPU clock speed.
- Designed with Intel's 82443 LX AGP set.
- Supports up to 1GB of DRAM (minimum of 8 MB) on board (please see Section 3.2).
- EP-61LXA-M will support Error Checking and Correcting (ECC) when using parity DRAM memory modules. This will detect multiple bit errors and correct 1-bit memory errors.
- Supports (3) 16-bit ISA slots, (4) 32-bit PCI slots, (1) AGP slot and provides (2) independent high performance PCI IDE interfaces capable of supporting PIO Mode 3/4 and UltraDMA 33 devices. The EP-61LXA-M supports (4) PCI Bus Master slots and a jumperless PCI INT# control scheme which reduces configuration confusion when plugging in PCI cards.
- Supports ATAPI (e.g. CD-ROM) devices on both Primary and Secondary IDE interfaces.
- Designed with Winbond W83977F Multi I/O (1 floppy port, 1 parallel port (LPP, ECP) and (2) serial ports (6550 Fast UART).  
Note: Japanese "Floppy 3 mode" is also supported.
- Includes a PS/2 mouse connector.
- Allows use of a PS/2 or AT keyboard.
- Features Award Plug & Play BIOS. With Flash Memory you can always upgrade to the current BIOS as they are released (<http://www.epox.com>, please visit our Technical Support section for the latest updates).
- EP-61LXA-M utilizes a Lithium battery which provides environmental protection and longer battery life.

## Section 3

## INSTALLATION

## EP 61LXA-M Detailed Layout

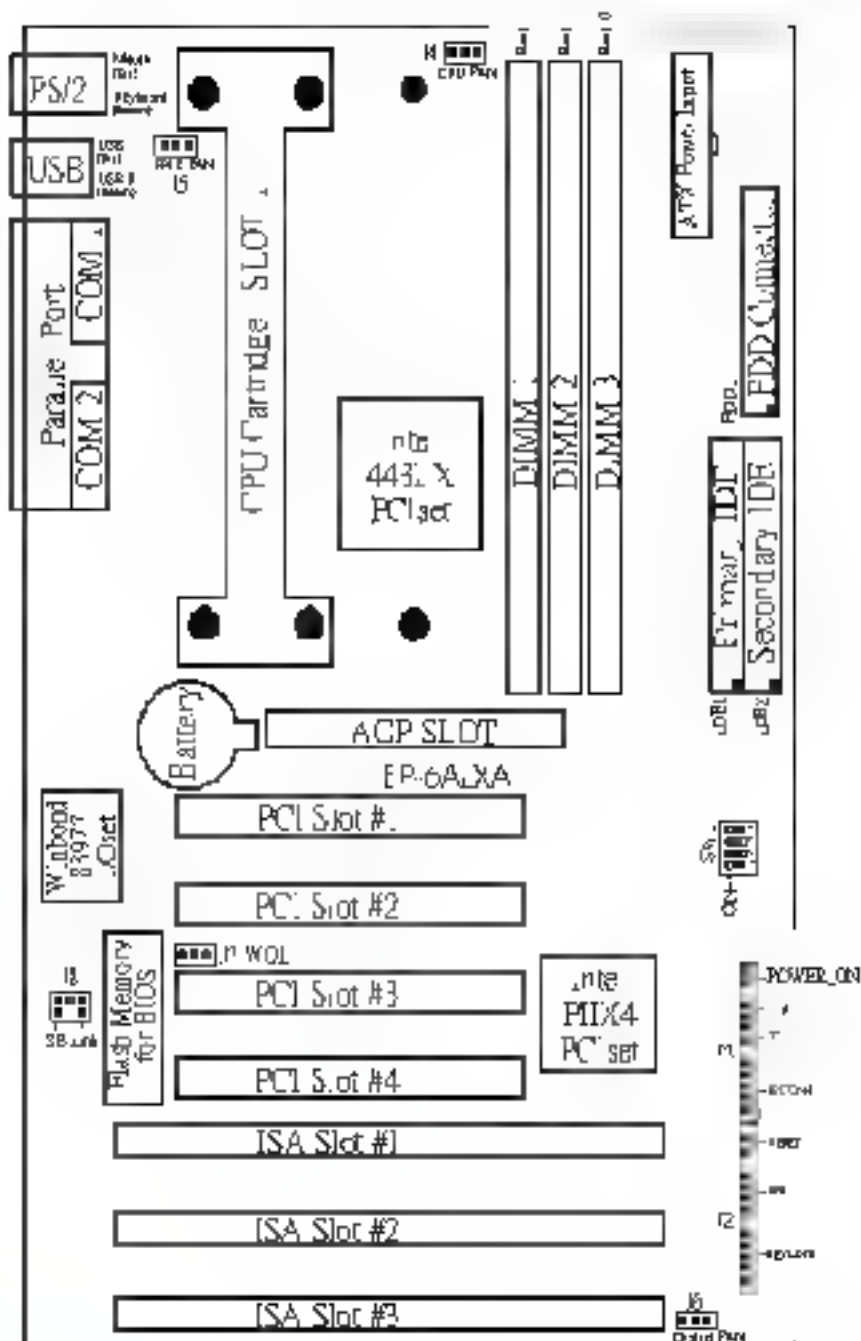


Figure 1



## Easy Installation Procedure

### Easy Installation Procedure

The following must be completed before powering on your new system

- 3-1 Configure DIP Switch to match your hardware
- 3-2 Install memory chips
- 3-3 Install Pentium II Processor
- 3-4 Device Connectors

#### Section 3-1 Configure DIP Switch


EPoX designs all motherboards with a DIP Switch to make your install fast and easy

The following will describe all of the DIP Switch that you are required to set before moving on to step 3-2

*Note The DIP Switch as depicted as shown (Figure 1) in their correct physical orientation*

SW1

ON ➔

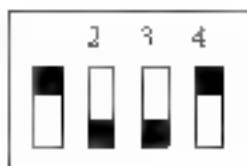

SW1				CPU
1	2	3	4	
ON			ON	233
	ON	ON	ON	266
	ON		ON	300
		ON	ON	333

## Section 3-2


### System Memory Configuration

#### Memory Layout

The EP-6 LXA-M supports 3) 168-pin DIMMs (Dual In-line Memory Module). The DIMMs can be either EDO (Enhanced Data Out) or SDRAM (Synchronized DRAM).

- DIMM SDRAM may be 83MHz (12ns), 100MHz (9ns) or 133MHz (7ns) bus speed.
- If you use both 50ns and 60ns memory you must configure your BIOS to read 60ns.
- When using Synchronous DRAM we recommend using the 4 clock waitstate over the 2 clock.
- **Fast Page Mode DRAM (FPM) is not supported by the LX AGPset. Only EDO and SDRAM are supported.**

Figure 2 and Table 1 show several possible memory configurations using both SIMM and DIMM.

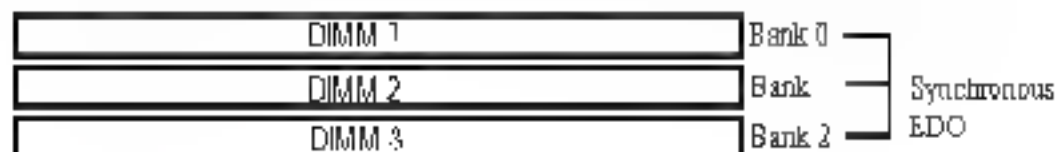

Total Memory	DIMM 1 (Bank 0)	DIMM 2 (Bank 1)	DIMM 3 (Bank 2)
= 168MB Maximum	EDO SDRAM* 8MB 16MB 32MB 64MB 288MB 256MB N/A	EDO SDRAM* 8MB 16MB 32MB 64MB 288MB 256MB N/A	EDO SDRAM* 8MB 16MB 32MB 64MB 128MB 256MB N/A
= 336MB Maximum	EDO SDRAM* 8MB 16MB 32MB 64MB 288MB 256MB N/A	EDO SDRAM* 8MB 16MB 32MB 64MB 288MB 256MB N/A	None
= 504MB Maximum	EDO SDRAM* 8MB 16MB 32MB 64MB 288MB 256MB N/A	None	None


\* SDRAM only supports 8, 16, 32, 64, 128MB DIMM modules

Table

## DIMM Module Installation

Figure 5 displays the notch marks and what they should look like on your DIMM memory module

DIMMs have 68 pins and two notches that will match with the onboard DIMM socket. DIMM modules are installed by placing the chip firmly into the socket at a 90 degree angle and pressing straight down (figure 6) until it fits tightly into the DIMM socket (figure 7).

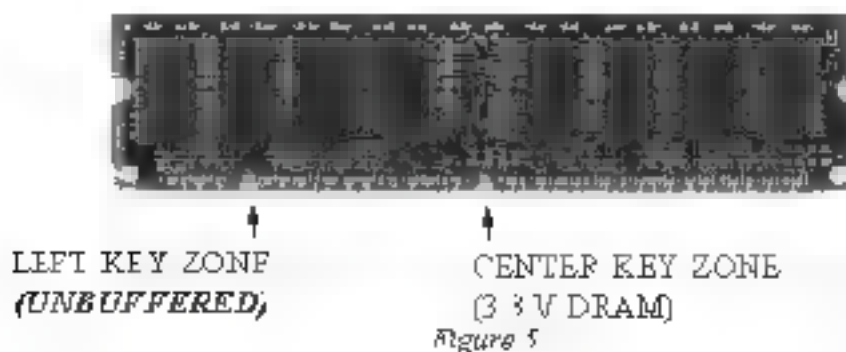

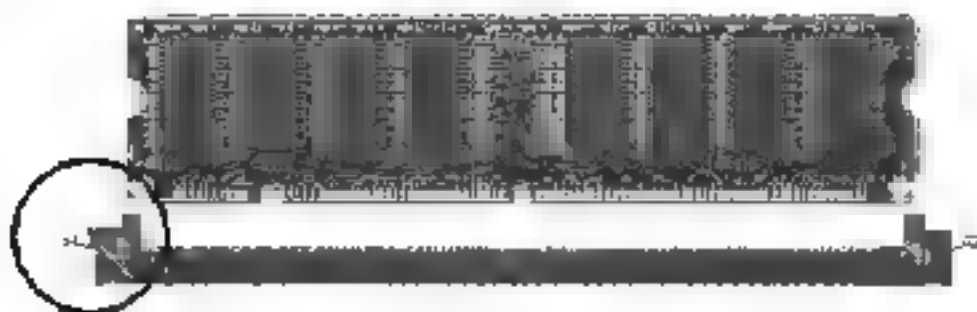


Figure 5

DIMM Module clip before installation

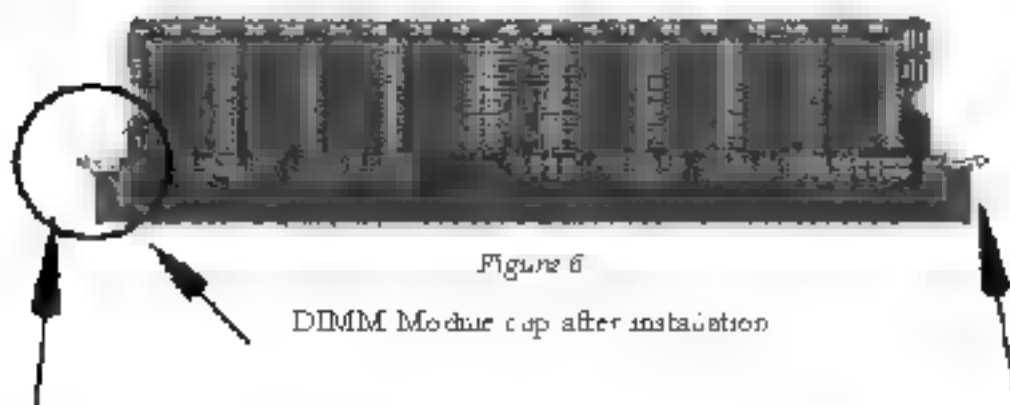


Figure 6

DIMM Module clip after installation

To remove the DIMM module simply press down both of the white clips on either side and the module will be released from the socket.

### Section 3-3

#### Installing a Pentium II Processor

The EP-61LXA-M uses the Single Edge Contact (SEC) slot for a Pentium II processor packaged in an SEC cartridge. The SEC slot is not compatible with other non-Pentium II processors.

Please have ready the following list of components so that we may install the processor onto the motherboard.

- 1 Heat sink support top/bottom piece
- 2 Pentium II processor heat sink
- 3 Intel Pentium II Processor

OK, now that you have all of your components ready, we can start.

- 1 First, please refer to figure 8 below and follow the direction to lift up the fixed foldable pentium® II Retention Mechanism. This pre-installed device is designed for you to install Pentium® II CPU more easier and to avoid any damage on the board due to overtightening the four screws.
- 2 One thing must be kept in your mind that please make sure to lift upright the foldable parts of the Retention module to fit and install CPU properly.



Figure 8

Now we are going to install the heatsink support base piece (figure 9) onto the motherboard. There is both a large and small hole (figure 10) so that the base will only fit in one direction. This piece needs to be pushed into the holes firmly until it is seated.

Now we are ready to install the SEC Cartridge Pentium II Processor into the Retention Module. The SEC Cartridge is mounted by sliding the SEC Cartridge into the Retention Module and letting it slide all the way down. Once it reaches the


bottom make sure you press firmly on SEC cartridge to firmly secure into the Slot 1 Socket

Now we need to secure the heatsink with the top half of the support (figure 11). Take the top piece of the support and slide it into the bottom fin (figure 11) on the heatsink and then push forward until it clips into the bottom base (figure 9) that is already there (figure 1).



Figure 9

Figure 9 shows the layout of Slot and the holes for mounting the Heatsink base piece (figure 8)

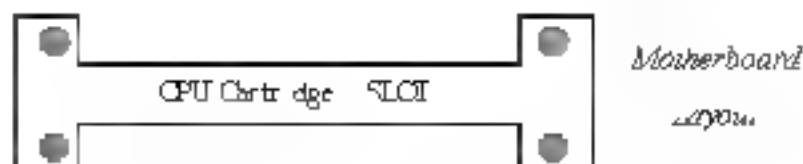

Large Hole for Heatsink Base

Small Hole for Heatsink Base

Figure 10

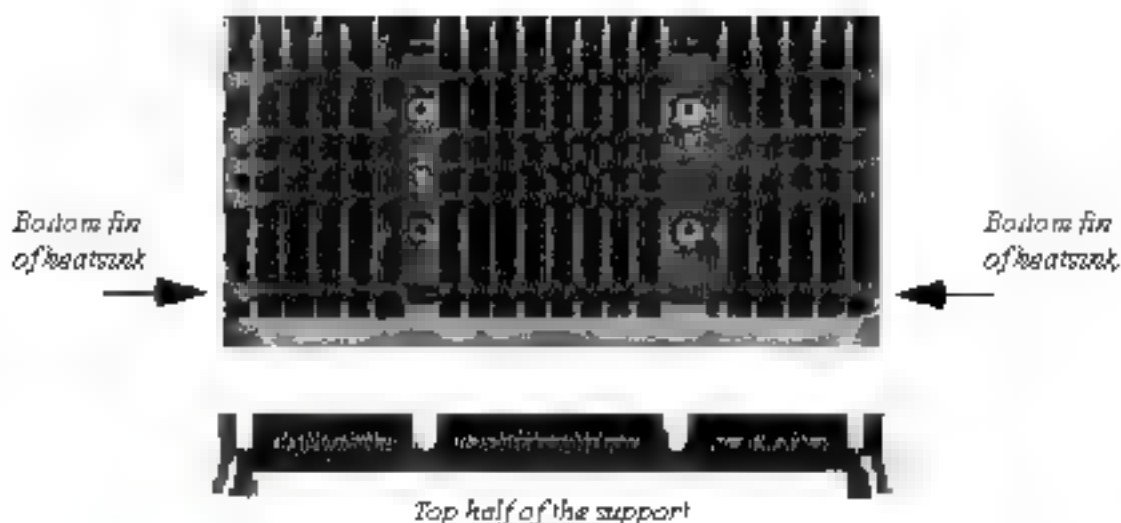


Figure 11



## Section 3-4

### Device Connectors

Please install the motherboard into the chassis

Now that your motherboard is installed you are ready to connect all your connections (figure 12)

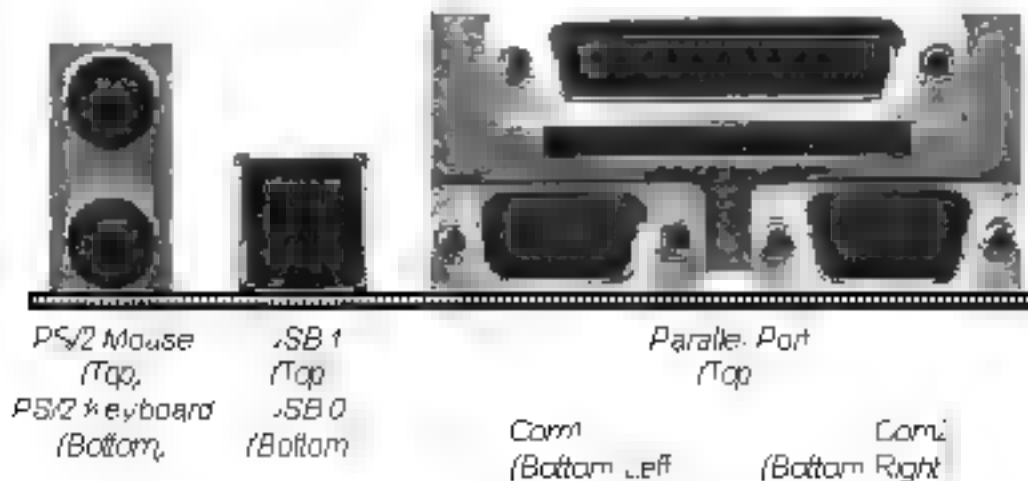


Figure 12

- J2 Chassis Panel Connector
  - Keylock, Speaker, Reset
- J3 IR Conn TB LED HDD LED POWER ON
- J4 CPU Fan Power
  - A plug in for the CPU Fan Power
- J5 Power Supply Fan Monitoring
  - A plug in for the Power supply so that BIOS can monitor the RPM's
- J6 Chassis Fan Power
  - A plug in for the chassis Fan Power
- J7 WOL (Wake up on Lan) Connector
- J8 SB Link Connector
- PW2 ATX Power Connector
  - 20-pin power connector
- IDE1 Primary IDE
- IDE2 Secondary IDE
- FDD1 Floppy Controller

**S e c t i o n****3 - 4****Device Connectors (continued)**

J2	1	■	<b>KeyLock</b> Keyboard lock switch & Power LED connector	
		■	1 Power LED + 4 Keylock	
		■	2 N/C	5 GND
		■	3 GND	
		■		
		■		
		■		
	1	■	<b>Speaker</b> Connect to the system's speaker for beeping	
		■	1 Speaker	3 GND
		■	2 N/C	4 GND
J3		■		
		■		
		■		
		■		
		■	<b>Reset</b> Closed to restart system	
		■		
	1	■	<b>IR Connector</b>	
		■	VCC	4 GND
		■	2 NC	5 IRTX
		■	3 IRRX	
		■		
		■		
	+	■	<b>IDE LED indicator</b> LED ON when Onboard PCI IDE Hard disks is activate	
		■		
	+	■	<b>Turbo LED indicator</b> LED ON when higher speed is selected	
		■		
		■		
		■	<b>Power On/Off</b> This is connected to the power button on the case	
		■	Using the Soft Off by Pwr BTIN feature, you can choose either Instant Off (turns system off immediately or 4 sec delay you need to hold the button down for 4 seconds before the system turns off) When the system is in 4 sec delay mode EPoK has added a special feature to make the system go into suspend mode when the button is pressed momentarily	
		■		

## Section 4

## AWARD BIOS SETUP

## BIOS Instructions

Award's ROM BIOS provides a built in Setup program which allows user to modify the basic system configuration and hardware parameters. The modified data will be stored in a battery-backed CMOS, so that data will be retained even when the power is turned off. In general, the information saved in the CMOS RAM will stay unchanged unless there is a configuration change in the system, such as hard drive replacement or a device is added.

It is possible for the CMOS battery to fail, this will cause data loss in the CMOS only. If this does happen you will need to reconfigure your BIOS settings.

## To enter the Setup Program :

Power on the computer and press the <Del> key immediately, this will bring you into the BIOS CMOS SETUP UTILITY.

ROM PCI ISA BIOS QA69KPAA  
CMOS SETUP UTILITY  
AWARD SOFTWARE INC.

STANDARD CMOS SETUP BIOS FEATURES SETUP CHIPSET FEATURES SETUP POWER MANAGEMENT SETUP PNP PCI CONFIGURATION INTEGRATED PERIPHERALS LOAD SETUP DEFAULTS	SUPERVISOR PASSWORD USER PASSWORD IDE HDD AUTO DETECTION HDD LOW LEVEL FORMAT SAVE & EXIT SETUP EXIT WITHOUT SAVING
ESC Quit F10 Save & Exit Setup	↑ ↓ → SELECT ITEM (Shift)P2 Change Color
Time, Date, Hard Disk Type	

Figure 1 CMOS Setup Utility

The menu displays all the major selection items. Select the item you need to reconfigure. The selections are made by moving the cursor (press any direction key) to the item and pressing the Enter key. An on-line help message is displayed at the bottom of the screen as the cursor is moved to various items which provides a better understanding of each function. When a selection is made, the menu of the selected item will appear so that the user can modify associated configuration parameters.

## 4-1 Standard CMOS Setup

Choose "Standard CMOS Setup" in the CMOS SETUP UTILITY Menu (Figure 2). The Standard CMOS Setup allows the user to configure system settings such as the current date and time, type of hard disk drive installed, floppy drive type and display type. Memory size is auto-detected by the BIOS and displayed for your reference. When a field is highlighted (use direction keys to move the cursor and the <Enter> key to select), the entries in the field can be changed by pressing the <PgDn> or the <PgUp> key.

ROMPC(MSA BIOS(2A69KPA9)  
STANDARD CMOS SETUP  
AWARD SOFTWARE, INC.

Date (mm dd yy) Wed, Apr 17 1996									
Time (hh:mm:ss) 12:53:21									
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZONE	SECTORS	MODEL	
Primary Master	Auto	0	0	0	0	0	0	0	Auto
Primary Slave	Auto	0	0	0	0	0	0	0	Auto
Secondary Master	Auto	0	0	0	0	0	0	0	Auto
Secondary Slave	Auto	0	0	0	0	0	0	0	Auto
<div style="display: flex; justify-content: space-between;"> <div>           Drive A: 1.44MB, 5 1/4 in            Drive B: None            Floppy 3 Mode Support: Disabled            Video: EGA/VGA            Halt On: All Errors         </div> <div>           Base Memory: 640K            Extended Memory: 387144K            Other Memory: 164K  <hr/>           Total Memory: 387784K         </div> </div>									
ESC Quit		↑ ↓ →		Select Item		PGUP/PAGE+		Modify	
F1 Help		/Shift) F1		Change Color					

Figure 2 Standard CMOS Setup

**NOTE** If the hard disk Primary Master/Slave and Secondary Master/Slave are set to Auto, then the hard disk size and model will be auto-detected.

**NOTE:** The "Halt On." field is used to determine when to halt the system by the BIOS if an error occurs.

**NOTE:** Floppy 3 Mode support is a mode used to support a special 3.5" drive used in Japan. This is a 3.5" disk that stores only 1.2 MB. The default setting for this is disabled.

## 4-2 BIOS Features Setup

Selecting the "BIOS FEATURES SETUP" option in the CMOS SETUP UTILITY menu allows users to change system related parameters in the displayed menu. This menu shows all of the manufacturer's default values for the EP-61EXA-M.

Pressing the [F1] key will display a help message for the selected item.

### ROM PCMSA BIOS(1A69KPA9) BIOS FEATURES SETUP AWARD SOFTWARE INC.

Virus Warning	Disabled	Video BIOS	Shadow	Enabled
CPU Internal Cache	Enabled	C8000-CBFFF	Shadow	Disabled
External Cache	Enabled	CC000-CFFFF	Shadow	Disabled
Quick Power On Self Test	Enabled	D0000-D3FFF	Shadow	Disabled
Boot Sequence	A, C, SC ST	D4000-D7FFF	Shadow	Disabled
Swap Floppy Drive	Disabled	D8000-DBFFF	Shadow	Disabled
Boot Up Floppy Seek	Enabled	DC000-DEFFF	Shadow	Disabled
Boot Up Hardlock Status	On			
Boot UP System Speed	High			
Gata A20 option	Fast			
Typeahead Rate Setting	Disabled			
Typeahead Rate (Chars/Sec)	5			
Typeahead Delay (Msec)	250			
Security Option	Setup			
PCI/VGA Palette Snoop	Disabled	Esc	Quit	↑ ↓ → Select Item
Assign IRQ For VGA	Enabled	F1	Help	PGUP/DN+ Modify
OS Select For DRAM > 64MB	Non-OS2	F2	Old Values	(Shift) F2 Color
Report NO HDD For Win95	NO	F7	Load Setup Defaults	

Figure 9 BIOS Features Setup

**Virus Warning** During and after the system boots up, any attempt to write to the boot sector or partition table of the hard disk drive will halt the system and an error message will appear. You should then run an anti-virus program to locate the virus. Keep in mind that this feature protects only the boot sector, not the entire hard drive. The default value is Disabled.

**Enabled:** Activates automatically when the system boots up causing a warning message to appear when anything attempts to access the boot sector

**Disabled:** No warning message will appear when anything attempts to access the boot sector

**Note:** Many disk diagnostic programs that access the boot sector table can trigger the virus warning message. If you plan to run such a program, we recommend that you first disable the virus warning.

**CPU Internal Cache** This controls the status of the processor's internal cache area

The default is Enabled

**Enabled:** This activates the processor's internal cache thereby increasing performance.

**Disabled:** This deactivates the processor's internal cache thereby lowering performance.

**External (L2) Cache** This controls the status of the external (L2) cache area  
The default is Enabled

**Enabled:** This activates the CPU L2 cache thereby increasing performance

**Disabled:** This deactivates the CPU L2 cache thereby lowering performance.

**Quick Power On Self Test** This category speeds up the Power On Self Test (POST)

The default is Enabled

**Enabled:** This setting will shorten or skip of the items checked during POST

**Disabled:** Normal POST

**Boot Sequence** This category determines which drive is searched first by the Operating System

The default is A,C,SCSI

The following is your list of options

[A, C, SCSI] [C, A, SCSI] [C, CD-ROM, A] [CD-ROM, C, A]  
[D, A, CD-ROM] [E, A, CD-ROM] [F, A, CD-ROM] [SCSI, A, C]  
[SCSI, C, A] [CD-ROM, ]



**Swap Floppy Drive** This will swap your physical drive letters A & B if you are using two floppy disks  
The default is Disabled

***Enabled:** Floppy A & B will be swapped under the O.S.*

***Disabled:** Floppy A & B will be not swapped*

**Boot Up Floppy Seek** During Power On Self Test (POST) BIOS will determine if the floppy disk drive installed is 40 or 80 tracks. Only 720K type is 40 tracks while 720K, 1.2MB and 44MB are all 80 tracks  
The default is Enabled

***Enabled:** The BIOS will search the floppy disk drive to determine if it is 40 or 80 tracks*

***Disabled:** The BIOS will not search for the type of floppy disk drive by track number*

***NOTE:** BIOS can not tell the difference between 720K, 1.2MB and 44MB drive types as they are all 80 tracks.*

**Boot Up NumLock Status** This controls the state of the NumLock key when the system boots  
The default is On

***On:** The keypad acts as a 10-key pad*

***Off:** The keypad acts like the cursor keys.*

**Boot Up System Speed** This controls the initial system speed of the computer  
The default is High

***High:** This setting sets the computer into normal operation mode.*

***Low:** This setting sets the computer into a slower operating mode. Some add-in peripherals or old software may require this setting. Using CTRL+ALT+ +, will switch you back into high speed mode*

**Gate A20 Option** This refers to the way the system addresses memory above 1MB - extended memory  
The default is Fast

***Normal:** The A20 signal is controlled by the keyboard controller or chipset hardware*

***Fast:** The A20 signal is controlled by Port 92 or chipset specific method*

**Typematic Rate Setting** This determines the keystrokes repeat rate.  
The default is Disabled.

***Enabled:** Allows typematic rate and typematic delay programming.*

***Disabled:** The typematic rate and typematic delay will be controlled by the keyboard controller in your system.*

**Typematic Rate (Chars/Sec)** This is the number of characters that will be repeated by a keyboard press.  
The default is 6.

<b>6</b> 6 characters per second	<b>8</b> 8 characters per second
<b>10</b> 10 characters per second	<b>12</b> 12 characters per second
<b>15</b> 15 characters per second	<b>20</b> 20 characters per second
<b>24</b> 24 characters per second	<b>30</b> 30 characters per second

**Typematic Delay (msec)** This setting controls the time between the first and the second character displayed by typematic auto repeat.  
The default is 250.

<b>250</b> 250 msec
<b>500</b> 500 msec
<b>750</b> 750 msec
<b>1000</b> 1000 msec

**Security Option** This category allows you to limit access to the System and Setup, or just to Setup.  
The default is Setup.

***System:** The system will not boot and the access to Setup will be denied if the correct password is not entered at the prompt.*

***Setup:** The system will boot, but the access to Setup will be denied if the incorrect password is not entered at the prompt.*

**PCI VGA Palette Snoop** This field controls the ability of a primary PCI VGA controller to share a common palette. When a snoop writes cycles with an ISA video card.  
The default is Disabled.

***Enabled:** If an ISA card is connected to a PCI VGA card via the VESA connector and that ISA card connects to a VGA monitor, then that ISA card uses the RAMDAC of the PCI card.*

***Disabled:** Disables the VGA card Palette Snoop function.*

**OS Select For DRAM > 64MB** Some operating systems require special handling. Use this option only if your system has greater than 64MB of memory. The default is Non-OS2.

*OS2* Select this if you are running the OS/2 operating system with greater than 64MB of RAM.

*Non-OS2* Select this for all other operating systems and configurations.

**Video BIOS Shadow** This option allows video BIOS to be copied into RAM. Video Shadowing will increase the video performance of your system. The default is Enabled.

*Enabled:* Video shadow is enabled.

*Disabled:* Video shadow is disabled.

**C8000 C8FFF Shadow**  
**CC000 CFFFF Shadow**  
**D0000 D3FFF Shadow**  
**D4000 D7FFF Shadow**  
**D8000 DBFFF Shadow**  
**DC000 DFFFF Shadow**

These categories determine whether ROMs from option cards will be copied into RAM. This will be in 16K byte or 32K byte units, and the size will depend on chipset of the option card.

*Enabled:* Optional shadow is enabled.

*Disabled:* Optional shadow is disabled.

## 4-3 Chipset Features Setup

Choose the "CHIPSET FEATURES SETUP" in the CMOS SETUP UTILITY

ROMPCMTSA BIOS(2A59PAB  
CHIPSETFEATLRESETLP  
AWARDSOFTWARE,INC

Auto Configuration	Enabled	SURAM CAS latency Time	4
EDO DRAM Timing	60ns	Speed Spectrum Modulated	Disabled
PC Watch Status	74 sec	CPU Warning Temperature	60C-140F
EDO DRAM to CAS# Delay	3	Current CPU Temperature	3.0C/37F
EDO DRAM Precharge Time	3	Current System Temp	3.0C/37F
ZEN DRAM Read Burst	x2.22	Current DWR SUP FAN Speed	0 RPM
EDO DRAM Write Burst	x2.22	Current CPU FAN Speed	1178 RPM
Bank Interleave by Mode	None/BY	Current Chassis FAN Speed	0 RPM
DRAM Refresh Postings	Enabled	CPU V1	2.80 V +1.5V 48.0
System BIOS Cacheable	Disabled	+3.3V	3.30 V +1.6V 1.16 u
Video BIOS Cacheable	Disabled	+3V	3.30 V 10 1.190 V
Video RAM Cacheable	Disabled	5V	3.30 V
8 Bit IO Recovery Time	9		
16 Bit IO Recovery Time	3		
Memory Hole At 1MB/10M	Disabled		
Power Release	Enabled		
Delayed Transcurem	Enabled		
ADP Aperture Size (MB)	8		
SURAM CAS to CAS Delay	Fast	Esc: Quit	↑ ↓ → Select Item
DRAM CAS Precharge Time	Fast	F1: Help	PageUp/↓ Modify
		F5: Ok Value	Left, F2 Color
		F7: Load Setup Defaults	

Figure 4 Chipset Features Setup

**Auto Configuration** This selects predetermined optimal values of the chipset parameters

The default is Enabled

**Enabled** This enables auto-configuration and provides the option to select predefined timing modes

**Disabled** This allows the user to specify DRAM timing parameters

**Note** If you exceed the performance characteristics of memory in your system it will result in lockups, crashes and other problematic system operations.

**EDO DRAM Speed Selection** This value must correspond to the speed of the DRAM installed in your system

The default is 60ns

*50ns. (Faster Burst Wait State for 50ns EDO DRAM.*

*60ns. (Slower Burst Wait State, for 60ns Fast Page Mode-EDO DRAM.*

**MA Additional Wait State** This allows the option to insert an additional wait state before the beginning of a memory read. Use of this option may be required to achieve compatibility with some system configurations.  
The default is Slow

*Fast. Inserts no wait state*

*Slow. Inserts one wait state for the memory cycle.*

**EDO RAS# to CAS# Delay** Allows you to insert a timing delay between the CAS and RAS strobe signals used when DRAM is written to, read from, or refreshed.  
The default is 3

*2. Faster performance.*

*3. Better reliability.*

**EDO RAS# Precharge Time** The precharge time is the number of cycles it takes for the RAS to accumulate its charge before EDO DRAM refresh. If insufficient time is allowed, refresh may be incomplete and the EDO DRAM may fail to retain data.

The default is 4

*3. Time equals 3 host clocks*

*4. Time equals 4 host clocks*

**EDO DRAM Read Burst (B/E/F)** This setting will allow you to set the timing for burst mode reads from EDO DRAM. The lower the timing number the faster the system addresses the memory.  
The default is x333

*x222. Use of this option may cause conflicts with some system configurations*

*x333. This is used for standard system configurations*

**EDO DRAM Write Burst (B/E/F)** This setting will allow you to set the timing for burst mode writes to EDO DRAM. The lower the timing number the faster the system addresses the memory.  
The default is x333

*x332. Use of this option may cause conflicts with some system configurations.*

*x333. This is used for standard system configurations*

**DRAM Data Integrity Mode** Use this option to configure the type of DRAM in your system

The default is Non ECC

*Non-ECC:* If your memory is Non-ECC memory, choose this option.

*ECC:* If your memory is ECC memory, choose this option

**CPU To PCI IDE Posting** This option allows the computer to post write cycles from the CPU to the PCI IDE interface. IDE accesses are posted in the CPU to PCI buffers for cycle optimization

The default is Enabled

*Enabled:* Enabled

*Disabled:* Disabled

**System BIOS Cacheable** This allows you to copy your BIOS code from slow ROM to fast RAM

The default is Disabled

*Enabled:* The option will improve system performance. However, if any program writes to this memory area, a system error may result.

*Disabled:* System BIOS non-cacheable

**Video BIOS Cacheable** This option copies the video ROM BIOS to fast RAM (C0000h to C7FFFh)

The default is Enabled

*Enabled:* Enables the Video BIOS Cacheable to speed up the VGA Performance

*Disabled:* Will not use the Video BIOS Cacheable function

**Video RAM Cacheable** This option allows the CPU to cache read/writes of the video RAM

The default is Enabled

*Enabled:* This option allows for faster video access

*Disabled:* Reduced video performance.



**8 Bit I/O Recovery Time** This function allows you to set the wait state that is added to an 8 bit ISA instruction originated by the PCI bus.  
The default is 2.

<i>NA.</i> No wait state	<i>8.</i> 8 wait states
<i>1.</i> 1 wait states	<i>2.</i> 2 wait states
<i>3.</i> 3 wait states	<i>4.</i> 4 wait states
<i>5.</i> 5 wait states	<i>6.</i> 6 wait states
<i>7.</i> 7 wait states	

**16 Bit I/O Recovery Time** This function allows you to set the wait state that is added to an 16 bit ISA instruction originated by the PCI bus.  
The default is 2.

<i>NA.</i> No wait state	<i>4.</i> 4 wait states
<i>3.</i> 3 wait states	<i>2.</i> 2 wait states
<i>1.</i> 1 wait states	

**Memory Hole at 15M 16M** You can reserve this memory area for the use of ISA adaptor ROMs.  
The default is Disabled.

**Enabled:** This field enables the main memory (15-16MB) to remap to ISA BUS.

**Disabled:** Normal Setting.

**NOTE:** If this feature is enabled you will not be able to cache this memory segment.

**Passive Release** This option allows access from the CPU to PCI bus to be active during passive release. Otherwise, the arbiter only accepts another PCI master access to local DRAM.  
The default is Enabled.

**Enabled:** Enabled.

**Disabled:** Disabled.

**Delayed Transaction** This option allows the chipset to use its embedded 32-bit posted write buffer to support delay transactions cycles.  
The default is Disabled.

**Enabled:** Server, enabled to support PCI 2.1 specification.

**Disabled:** Disabled.

**AGP Aperture Size** The amount of system memory that the AGP card is allowed to share

The default is 4

- 4* 4MB of systems memory accessible by the AGP card
- 8* 8MB of systems memory accessible by the AGP card
- 16* 16MB of systems memory accessible by the AGP card
- 32* 32MB of systems memory accessible by the AGP card
- 64* 64MB of systems memory accessible by the AGP card
- 128* 128MB of systems memory accessible by the AGP card
- 256* 256MB of systems memory accessible by the AGP card

**SDRAM RAS# to CAS# Delay** Allows you to insert a timing delay between the CAS and RAS strobe signals, used when SDRAM is written to read from or refreshed

The default is Fast

- Fast* Provides faster memory performance
- Slow* Provides better memory compatibility

**SDRAM Precharge Time** The precharge time is the number of cycles it takes for the RAS to accumulate its charge before SDRAM refresh. If insufficient time is allowed, refresh may be incomplete and the SDRAM may fail to retain data

The default is Fast

- Fast* Provides faster memory performance
- Slow* Provides better memory compatibility

**SDRAM CAS Latency Time** This setting defines the CLALI timing parameter of the SDRAM in terms of clocks

The default is 3

- 2* Provides faster memory performance
- 3* Provides better memory compatibility

**CPU Warning Temperature** This is the temperature that the computer will respond to an overheating CPU

The default is disabled

- Enabled* Temperature is monitored on the CPU
- Disabled* This feature is turned off

**Current CPU Temperature** This is the current temperature of the CPU

**Current Power FAN Speed** The current power fan speed in RPMs

**Current CPU FAN Speed** The current CPU fan speed in RPMs

**Current Chassis FAN Speed** The current chassis fan speed in RPMs

**CPU(V)** The voltage level of the CPU

**Note:** The hardware information above is not available for a mainboard without NS LM75/LM78 ICs

## 4-4 Power Management Setup

Choose the "POWER MANAGEMENT SETUP" in the CMOS SETUP UTILITY to display the following screen. This menu allows the user to modify the power management parameters and IRQ signals. In general, these parameters should not be changed unless it is absolutely necessary.

ROM BIOS AWARD BIOS  
POWER MANAGEMENT SETUP  
AWARD SOFTWARE, INC.

Power Management	User Define	**Reload Global Timer Events**	
Pld Control by ACPI	Yes	IRQ [3-9, 10-15] Wake	Enabled
Video off Method	VGA SYNC+Blank	Primary IDE 0	Disabled
Video off After	Standby	Primary IDE 1	Disabled
Modem Use IRQ		Secondary IDE 0	Disabled
Dose Mode	Disabled	Secondary IDE 1	Disabled
Standby Mode	Disabled	Floppy Disk	Disabled
Suspend Mode	Disabled	Serial Port	Enabled
HDD Power Down	Disabled	Parallel Port	Disabled
Throttle Duty Cycle	62.5%		
o/GA Active Monitor	Enabled		
Soft-off by PWR-BTTN	Delay + Sec.		
Resume by Alarm	Enabled		
Power Loss Recovery	Enabled		
Resume By Alarm	Enabled		
Date of Month Alarm	0		
Time (hh:mm:ss) Alarm	8:00		
IRQs Clock Sleep	Disabled		

Figure 5 Power Management Setup

You can only change the content of Dose Mode, Standby Mode, and Suspend Mode when the Power Management is set to User Define.

**Power Management** Use this to select your Power Management selection.  
The default is User define

***Disabled:** The system operates in NORMAL conditions (Non-GREEN), and the Power Management func. on is disabled.*

***Max. saving:** Maximum power savings. Inactivity period is 1 minute in each mode.*

***Min. saving:** Minimum power savings. Inactivity period is 1 hour in each mode.*

***User define:** Allows user to define PM Timers parameters to control power saving mode.*

**PM controlled APM** This option shows whether or not you want the Power Management to be controlled the Advanced Power Management (APM).  
The default is Yes

***Yes:** APM controls your PM*

***No:** APM does not control your PM*

**Video Off Method** This option allows you to select how the video will be disabled by the power management.  
The default is V/H Sync + Blank

***V/H Sync + Blank:** System turns off vertical and horizontal synchronization ports and writes blanks to the video buffer.*

***DPMS:** Select this option if your monitor supports the Display Power Management Signaling (DPMS) standard of the Video Electronics Standards Association (VESA). Use the software supplied for your video subsystem to select video power management values.*

***Blank Screen:** System only writes blanks to the video buffer.*

**Video Off After** Tells you what time frame that the video will be disabled under current power management settings.  
The default is Standby

***Standby:** Video powers off after time shown in standby mode setting.*

***Doze:** Video powers off after time shown in doze mode setting.*

***Suspend:** Video powers off after time shown in suspend mode setting.*

***N/A:** Video power off not controlled by power management.*

**MODEM Use IRQ** Name the interrupt request (IRQ) line assigned to the modem (if any) on your system. Activity of the selected IRQ always awakens the system. Default is IRQ 3.

<i><b>N/A</b></i> No IRQ is used	<b>3</b> IRQ 3
<b>4</b> IRQ 4	<b>5</b> IRQ 5
<b>7</b> IRQ 7	<b>9</b> IRQ 9
<b>10</b> IRQ 10	<b>11</b> IRQ 11

The EP-51LXA-M supports HDD Power Down, Doze and Standby power saving functions when using the Intel Pentium II Processor. The default is Disabled.

**Doze Mode:** The "Doze" mode timer starts to count when no "PM events" have occurred.

**Standby Mode:** When the standby mode timer times out, it will enter the standby mode and retain CPU at a slow working speed. The screen will be blanked out.

**Suspend Mode:** This function works only when the Pentium II Processor is installed. The timer starts to count when "System Standby" mode timer is turned out and no "PM Events" are occurring. Valid range is from 1 minute up to 1 hour.

**HDD Power Down:** HDD Standby timer can be set from 1 to 15 minutes.

**VGA Active Monitor:** Use this option if your monitor has advanced power saving features. The default is Enabled.

***Enabled:** Your monitor's power features will be included in power management.*

***Disabled:** Your monitor's power features will not be included in power management.*

**Soft-Off by PWR-BT/N:** Use this to select your soft-off function. The default is Instant Off.

***Instant Off:** Turns off instantly.*

***4 Second Delay:** Turns off after a 4 second delay. If momentary press of button, the system will go into Suspend Mode. Press again to take system out of Suspend Mode.*

**Resume by Ring** This option is used to set the remote ring in feature. This option is only available when Power Loss Recovery is Enabled.

The default is Enabled.

*Enabled:* The system can use remote ring-in to wake the system up.

*Disabled:* The system cannot use remote ring in to wake system up.

**Power Loss Recovery** If the power to the system is cut off the system will turn itself back on with no user intervention.

The default is Enabled.

*Enabled:* The system will power back on after a power interruption.

*Disabled:* The system will stay off after a power interruption.

**Resume by Alarm** This option allows you to have the system turn on at a preset time each day or on a certain day. This option is only available when Power Loss Recovery is Enabled.

The default is Enabled.

*Enabled:* The system will turn on at the preset time.

*Disabled:* The system will not turn on until you turn it on.

**Date (of month) Alarm** This is how you set the date that the system will turn on. The default is 0.

*0:* Setting this to 0 will turn the system on everyday at the preset time.

*1-31:* Represents the day of the month that you need the system to turn on.

**Time (hh:mm:ss) Alarm:** This sets the time that you need the system to turn on. The default is 08:00:00.

#### **\*\*Reload Global Timer Events \*\***

These options allow the user to reset the global power features timer if any of the enabled events occur.

**IRQ [3, 7, 9, 15], NMI** The default is Enabled.

**Primary IDE 0** The default is Disabled.

**Primary IDE 1** The default is Disabled.

**Secondary IDE 0** The default is Disabled.

**Secondary IDE 1** The default is Disabled.

**Floppy Disk** The default is Disabled.

**Serial Port** The default is Enabled.

**Parallel Port** The default is Disabled.

## 4-5 PNP/PCI Configuration

The PNP/PCI configuration program is for the user to modify the PCI/ISA IRQ signals when various PCI/ISA cards are inserted in the PCI or ISA slots.

**WARNING:** Conflicting IRQ's may cause the system to not find certain devices.

### ROM PCI/ISA BIOS (2A69JRM2) PNP/PCI CONFIGURATION AWARD SOFTWARE, INC.

PNP OS Installed	NO	PCI IDE IRQ Map To	PCIAUTO
Resources Controlled By	Manual	Primary IDE INT#	A
Reset Configuration Data	Enabled	Secondary IDE INT#	B
IRQ-1 assigned to	Legacy ISA	Used I/OM base addr	N/A
IRQ-2 assigned to	Legacy ISA		
IRQ-3 assigned to	PC/ISA PnP		
IRQ-4 assigned to	PC/ISA PnP		
IRQ-5 assigned to	PC/ISA PnP		
IRQ-6 assigned to	PC/ISA PnP		
IRQ-7 assigned to	PC/ISA PnP		
IRQ-8 assigned to	PC/ISA PnP		
IRQ-9 assigned to	PC/ISA PnP		
IRQ-10 assigned to	PC/ISA PnP		
IRQ-11 assigned to	PC/ISA PnP		
IRQ-12 assigned to	PC/ISA PnP		
IRQ-13 assigned to	PC/ISA PnP		
IRQ-14 assigned to	PC/ISA PnP		
IRQ-15 assigned to	PC/ISA PnP		
DMA-0 assigned to	PC/ISA PnP		
DMA-1 assigned to	PC/ISA PnP		
DMA-2 assigned to	PC/ISA PnP		
DMA-3 assigned to	PC/ISA PnP		
DMA-4 assigned to	PC/ISA PnP		
DMA-5 assigned to	PC/ISA PnP		
DMA-6 assigned to	PC/ISA PnP		
DMA-7 assigned to	PC/ISA PnP		

Esc Quit  
F1 Help  
F2 Old Values  
F3 Load Setup Defaults

↑ ↓ → Select Item  
DEL/END/← Modify  
(Shift) F2 Color

**PNP OS Installed** Do you have a PNP OS installed on your system. The default is No.

*Yes:* Select if you are using a PNP OS.

*No:* Select if your OS does not support PNP.

**Resources Controlled By** Who controlled the system PNP/PCI resources. The default is Manual.

*Manual:* PNP Card's resources will be controlled manually. You can set which IRQ X and DMA X are assigned to PC/ISA PnP or Legacy ISA Cards.

*Auto:* If your ISA card and PCI card are all PNP cards, BIOS will assign the interrupt resource automatically.




**Reset Configuration Data** This setting allows you to clear ESCD data. The default is Disabled.

*Disabled.* Normal Setting.

*Enabled.* If you have plugged in some Legacy cards to the system and they were recorded into ESCD (Extended System Configuration Data), you can set this field to Enabled in order to clear ESCD.

**PCI IDE IRQ Map To** This item allows the user to configure the system for the type of IDE hard disk controller in use. By default, the BIOS assumes that the hard drive controller is an ISA device rather than a PCI controller. If you are using a PCI controller, then you will need to change this to specify which PCI slot has the controller and which PCI interrupt (A, B, C, or D) is associated with the connected IDE devices.

The default value is PCI-AUTO. This will allow the system to automatically configure the IDE devices.

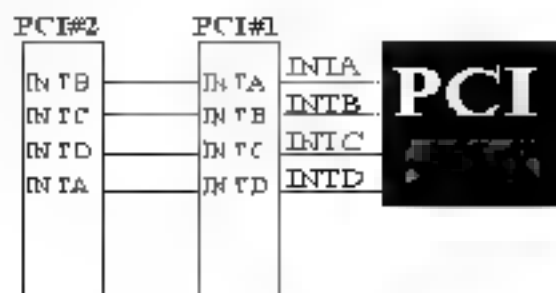

**Figure 7: The Combination of PCI INT#lines**

**Used MEM base addr** The Used MEM base addr: CB00, CC00, D000, D400, D800, DC00, and Used MEM Length: 8K, 16K, 32K, 64K are used to support some specific ISA Legacy cards with requested memory space below 1M address. Now with these two functions, users can define where the used memory address is located and its length of the legacy area that is used by the legacy device to avoid the memory space conflict. For example, if you select "D000" for Used MEM base addr and "16K" for "Used MEM Length", that means the address region D000H-D3FFFH is occupied by ISA legacy cards, and thus BIOS will not assign this region for PoP/ISA and PCI cards.

The default is N/A.

**IDE HDD Block Mode** IDE Block Mode allows the controller to access blocks of sectors rather than a single sector at a time

The default is Enabled

***Enabled** Enables IDE HDD Block Mode. Provides higher HDD transfer rates.*

***Disabled** Disables IDE HDD Block Mode.*

**Onboard Primary PCI IDE** The default value is Enabled

***Enabled** Enables Onboard IDE primary port.*

***Disabled** Disables Onboard IDE primary port.*

**Onboard Secondary PCI IDE**

The default is Enabled

***Enabled** Enables Onboard IDE secondary port.*

***Disabled** Disables Onboard IDE secondary port.*

**IDE Primary Master PIO**

The default is Auto

***Auto** BIOS will automatically detect the Onboard Primary Master PCI IDE HDD Accessing mode.*

***Mode 0-4** Manually set the IDE Programmed interrupt mode.*

**IDE Primary Slave PIO**

The default is Auto

***Auto** BIOS will automatically detect the Onboard Primary Slave PCI IDE HDD Accessing mode.*

***Mode 0-4** Manually set the IDE Programmed interrupt mode.*

**IDE Secondary Master PIO**

The default is Auto

***Auto** BIOS will automatically detect the Onboard Secondary Master PCI IDE HDD Accessing mode.*

***Mode 0-4** Manually set the IDE Programmed interrupt mode.*

**IDE Secondary Slave PIO**

The default is Auto

***Auto** BIOS will automatically detect the Onboard Secondary Slave PCI IDE HDD Accessing mode.*

*Mode 0-4. Manually set the LDE Programmed interrupt mode*

**IDE Primary Master UDMA** This allows you to select the mode of operation for the hard drive

The default is Auto

*Auto.* The computer will select the optimal setting

*Disabled.* The hard drive will run in normal mode.

**IDE Primary Slave UDMA** This allows you to select the mode of operation for the hard drive

The default is Auto

*Auto.* The computer will select the optimal setting

*Disabled.* The hard drive will run in normal mode

**IDE Secondary Master UDMA** This allows you to select the mode of operation for the hard drive

The default is Auto

*Auto.* The computer will select the optimal setting

*Disabled.* The hard drive will run in normal mode.

**IDE Secondary Slave UDMA** This allows you to select the mode of operation for the hard drive

The default is Auto

*Auto.* The computer will select the optimal setting.

*Disabled.* The hard drive will run in normal mode.

**USB Keyboard Support** This controls the activation status of an optional USB keyboard that may be attached.

The default is disabled

*Enabled* Enable USB keyboard support.

*Disabled* Disable USB keyboard support.

**OnBoard Primary PCI IDE** This option turns on and off the onboard primary IDE. The default is enabled.

***Enabled.** This activates the primary PCI IDE.*

***Disabled.** This disables the primary PCI IDE and frees up the resource.*

**OnBoard Secondary PCI IDE** This option turns on/off the onboard secondary IDE. The default is enabled.

***Enabled.** This activates the secondary PCI IDE.*

***Disabled.** This disables the secondary PCI IDE and frees up its resources.*

**KBC input clock** This sets the keyboard clock value. The default is 12 MHz.

***Options:** 6, 8, 12, 16 are the available choices.*

**Onboard FDC Controller** This controls the state of the onboard floppy controller. The default value is Enabled.

***Enabled:** Enable the Onboard Winbond Chip's floppy drive interface controller.*

***Disabled:** Disable the Onboard Winbond Chip's floppy drive interface controller.*

**Onboard Serial Port 1** This field allows the user to configure the 1st serial port. The default is Auto.

***AUTO:** Enable Onboard Serial port 1 and address is Auto adjusted.*

***COM1:** Enable Onboard Serial port 1 and address is 1F8H/IRQ4.*

***COM2:** Enable Onboard Serial port 1 and address is 2F8H/IRQ3.*

***COM3:** Enable Onboard Serial port 1 and address is 1E8H/IRQ4.*

***COM4:** Enable Onboard Serial port 1 and address is 2E8H/IRQ3.*

***Disabled:** Disable Onboard Winbond Chip's CHIP's Serial port 1.*

**Onboard Serial Port 2** This field allows the user to configure the 2nd serial port. The default is Auto.

***AUTO:** Enable Onboard Serial port 2 and address is Auto adjusted.*

***COM1:** Enable Onboard Serial port 2 and address is 1F8H/IRQ4.*

***COM2:** Enable Onboard Serial port 2 and address is 2F8H/IRQ3.*

***COM3:** Enable Onboard Serial port 2 and address is 1E8H/IRQ4.*

***COM4:** Enable Onboard Serial port 2 and address is 2E8H/IRQ3.*

***Disabled:** Disable Onboard Winbond Chip's CHIP's Serial port 2.*

**Onboard IR Controller IrDA Controller**

The default is Enabled

**IR Address Select** The port location of the IR controller

The default is 2E8H

**IR Mode** The mode of the IR controller

The default is IrDA

**IR Transaction Delay**

The default is Enabled

**IR IRQ Select**

The default is IRQ 10

**IR Mode use DMA**

The default is Disable

**Onboard Parallel port** This field allows the user to configure the LPT port

The default is 378H IRQ 7

**378H** Enable Onboard LPT port and address is 378H and IRQ7

**278H** Enable Onboard LPT port and address is 278H and IRQ5.

**3BCH** Enable Onboard LPT port and address is 3BCH and IRQ7

**Disabled** Disable Onboard Winbond Chip's LPT port.

**Parallel Port Mode** This field allows the user to select the parallel port mode

The default is ECP+EPP

**Normal** Standard mode, IBM PC AT Compatible bidirectional parallel port.

**EPP** Enhanced Parallel Port mode

**ECP** Extended Capabilities Port mode.

**EPP+ECP** ECP Mode & EPP Mode.

**ECP Mode USE DMA** This field allows the user to select DMA 0 or DMA3 for the ECP mode

The default is DMA3

**DMA0** This field selects the routing of DMA0 for the ECP mode

**DMA3** This field selects the routing of DMA3 for the ECP mode

## 4-8 Change Supervisor or User Password

To change the password, choose the "SUPERVISOR PASSWORD or USER PASSWORD" option from the CMOS SETUP UTILITY menu and press [Enter]

*NOTE: Either "Setup" or "System" must be selected in the "Security Option" of the BIOS FEATURES SETUP menu.*

- 1 If CMOS is corrupted or the option was not used, a default password stored in the ROM will be used. The screen will display the following message

Enter Password

Press the [Enter] key to continue after the proper password is given

- 2 If the CMOS is corrupted or the option was used earlier and the user wishes to change the default password, the SETUP UTILITY will display a message and ask for a confirmation

Confirm Password

- 3 After pressing the [Enter] key (ROM password if the option was not used) or current password (user-defined password), the user can change the password and store new one in CMOS RAM. A maximum of 8 characters can be entered

## 4-9 IDE HDD Auto Detection

The "IDE HDD auto detection" utility is a very useful tool, especially when you do not know which kind of hard disk type you are using. You can use this utility to detect the correct disk type installed in the system automatically. But now you can set HARD DISK TYPE to Auto in the STANDARD CMOS SETUP. You don't need the "IDE HDD AUTO DETECTION" utility. The BIOS will Auto detect the hard disk size and model on display during POST.

RDM PC05A BIOS (2A69K PAA)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.

HARD DISKS	TYPE	SIZE	CYLs	HEADs	PRECOMP	LANDZONE	SECTORS	MODE
Primary Master								
Select Secondary Size Option (0=Skip) N								
OPTIONS	SIZE	CYLs	HEAD	PRECOMP	LANDZ	SECTOR	MODE	
2'Y)	43.0	124	15	0	1+047	63	LBA	
1	43.0	14048	9	6.5535	1+047	63	NORMAL	
	43.0	928	44	6.5535	1+047	63	LARGE	
Note: Some Discs (like SCSI UNITs) must use NORMAL for installation								
<div> <div>ESC</div> <div>Skip</div> </div>								

Figure 8 IDE HDD Auto Detection

### NOTE HDD Modes

The Award BIOS supports 3 HDD modes: NORMAL, LBA & LARGE NORMAL mode.

General access mode in which neither the BIOS nor the IDE controller will make any transformations during accessing.

The maximum number of cylinders, head & sectors for NORMAL mode are

1024	16	&	63
no Cylinder			1024
x no Head			16
x no Sector			63
x no per sector			512
			528 Megabytes

If user set his HDD to NORMAL mode, the maximum accessible HDD size will be 528 Megabytes even though its physical size may be greater than that.



**LBA (Logical Block Addressing) mode** A new HDD accessing method to overcome the 528 Megabyte bottleneck. The number of cylinders, heads & sectors shown in setup may not be the number physically contained in the HDD. During HDD accessing, the IDE controller will transform the logical address described by sector, head & cylinder into its own physical address inside the HDD. The maximum HDD size supported by LBA mode is 8.4 GigaBytes which is obtained by the following formula:

$$\begin{array}{rcl}
 \text{no Cylinder} & & 1024 \\
 \times \text{no Head} & & 255 \\
 \times \text{no Sector} & & 63 \\
 \hline
 \text{bytes per sector} & & 512 \\
 \hline
 & & 8.4 \text{ GigaBytes}
 \end{array}$$

**LARGE mode** Extended HDD access mode supported by Award Software.

Some IDE HDDs contain more than 1024 cylinder without LBA support. In some cases, user do not want LBA. The Award BIOS provides another alternative to support these kinds of LARGE mode.

CYLIS	HEADS	SECTOR	MODE
1120	16	59	NORMAL
560	32	59	LARGE

BIOS tricks DOS (or other OS) that the number of cylinders is less than 1024 by dividing it by 2. At the same time, the number of heads is multiplied by 2. A reverse transformation process will be made inside.

INT 13h in order to access the right HDD address.

#### Maximum HDD size

$$\begin{array}{rcl}
 \text{no Cylinder} & & (1024) \\
 \times \text{no Head} & & 32 \\
 \times \text{no Sector} & & 63 \\
 \hline
 \text{bytes per sector} & & 512 \\
 \hline
 & & 1 \text{ GigaByte}
 \end{array}$$

**Note:** To support LBA or LARGE mode of HDDs, there must be some software involved. All the software is located in the Award HDD Service Routine (INT 13h). It may fail to access a HDD with LBA (LARGE) mode selected if you are running under a Operating System which replaces the whole INT 13h.

UNIX operating systems do not support either LBA or LARGE and must utilize the Standard mode. UNIX can support drives larger than 528MB.

### **4-10 HDD Low Level Format**

**Interleave** Select the interleave number of the hard disk drive you wish to perform a low level format on. You may select from 1 to 8. Check the documentation that came with the drive for the correct interleave number, or select 0 for automatic detection.

**Auto scan bad track** This allows the ability to scan first then format by each track.

**Start** Press <Y> to start low level format.

### **3-11 Save & Exit Setup**

The "SAVE & EXIT SETUP" option will bring you back to the boot up procedure with all the changes you just recorded in the CMOS RAM.

### **3-12 Exit Without Saving**

The "EXIT WITHOUT SAVING" option will bring you back to normal boot up procedure without saving any data into CMOS RAM.

**All old data in the CMOS will not be destroyed.**

## Section 5

## DMI Access

DMI or desktop Management Interface, is a feature that is able to auto-detect and record information about your computer system. This information is used by computing professionals to accurately determine your system configuration and to diagnose and resolve problems.

The computer's BIOS will detect and record as much information as it is able to, and will store that information in a special location in the BIOS.

The DMI configuration utility will allow system integrators to add information that the BIOS cannot detect such as model and brand of motherboard and other components. This information cannot be detected by the BIOS and must be added by the system integrator or vendor.



Figure 4. DMi Stress Score.

## Appendix A:

### A-1 MEMORY MAP

Address Range	Size	Description
00000-7FFFF]	12K	Conventional memory
80000-9FBFF]	127K	Extended Conventional memory
9FC00-9FFFF]	1K	Extended BIOS data area if PS/2 mouse is installed
A0000-C7FFF]	160K	Available for Hi DOS memory
C8000-DFFFF]	96K	Available for Hi DOS memory and adapter ROMs
E0000-EEFFF]	60K	Available for IMB
EF000-EFFFF]	4K	Video service routine for Monochrome & CGA adapter
F0000-F7FFF]	32K	BIOS CMOS setup utility
F8000-FCFFF]	20K	BIOS runtime service routine (2)
FD000-FDFFF]	4K	Plug and Play ESCD data area
FE000-FFFFFF]	8K	BIOS runtime service routine (1)

### A-2 I/O MAP

000-00F]	DMA controller (Master)
020-024	INTERRUPT CONTROLLER (Master)
022-023]	CHIPSET control registers I/O ports
040-05F]	TIMER control registers
060-06F]	KEYBOARD interface controller (8042)
070-07F]	RTC ports & CMOS I/O ports
080-09F]	DMA register
0A0-0BF]	INTERRUPT controller (Slave)
0C0-0DF]	DMA controller (Slave)
0FD-0FF]	MATH COPROCESSOR
1E0-1F8	HARDISK controller
278-27F]	PARALLEL port 2
2B0-2DF]	GRAPHICS adapter controller
2F8-2FF]	SERIAL port 2
360-36F]	NETWORK ports
378-37F]	PARALLEL port
3B0-3BF]	MONOCHROME & PARALLEL port adapter
3C0-3CF]	EGA adapter

3D0-3DF]	CGA adapter
3F0-3F7]	FLOPPY DISK controller
3F8-3FF]	SERIAL port 1

### A-3 TIMER & DMA CHANNELS MAP

#### TIMER MAP

TIMER Channel 0	System timer interrupt
TIMER Channel 1	DRAM REFRESH request
TIMER Channel 2	SPEAKER tone generator

#### DMA CHANNELS

DMA Channel 0	Available
DMA Channel 1	Onboard ECP Option
DMA Channel 2	FLOPPY DISK (SMC CHIP)
DMA Channel 3	Onboard ECP default
DMA Channel 4	Cascade for DMA controller
DMA Channel 5	Available
DMA Channel 6	Available
DMA Channel 7	Available

### A-4 INTERRUPT MAP

#### NMI

Parity check error

#### RQ (H/W)

0	System TIMER interrupt from TIMER 0 KEYBOARD output buffer full
2	Cascade for IRQ 8-15
3	SERIAL port 2
4	SERIAL port 1
5	PARALLEL port 2
6	FLOPPY DISK (SMC CHIP)
7	PARALLEL port
8	RTC clock
9	Available
10	Available
11	Available
12	PS/2 Mouse
13	MATH coprocessor

- 4 Onboard HARD DISK IDE channel
- 5 Onboard HARD DISK IDE channel

## A-5 RTC & CMOS RAM MAP

### RTC & CMOS

- 00 Seconds
- 0 Second alarm
- 02 Minutes
- 03 Minutes alarm
- 04 Hours
- 05 Hours alarm
- 06 Day of week
- 07 Day of month
- 08 Month
- 09 Year
- 0A Status register A
- 0B Status register B
- 0C Status register C
- 0D Status register D
- 0E Diagnostic status byte
- 0F Shutdown byte
- 1 FLOPPY DISK drive type byte
- Reserve
- 2 HARD DISK type byte
- 3 Reserve
- 4 Equipment type
- 5 Base memory low byte
- 6 Base memory high byte
- 7 Extension memory low byte
- 8 Extension memory high byte
- 9 2d
- 2E 2F
- 30 Reserved for extension memory low byte
- 31 Reserved for extension memory high byte
- 32 DATE CENTURY byte
- 33 INFORMATION FLAG
- 34 3F Reserve
- 40 7F Reserved for CHLIPSET SETTING DATA

**Appendix B:****B-1 POST CODES**

ISA POST codes are typically output to I/O port address 80h

POST (hex)	DESCRIPTION
01-02	Reserved
03	Turn off OEM specific cache shadow
03	<ol style="list-style-type: none"> <li>1. Initialize EISA registers (EISA BIOS only)</li> <li>2. Initialize all the standard devices with default values</li> </ol> Standard devices includes DMA controller (8237) Programmable Interrupt Controller (8259) Programmable Interval Timer (8254) RTC chip
04	Reserved
05	1. Keyboard Controller Self Test
06	2. Enable Keyboard Interface
07	Reserved
08	Verifies CMOS's basic R/W functionality
0C	Auto-detection of onboard DRAM & Cache
05	Copy the BIOS from ROM into E0000-FFFFF shadow RAM so that POST will go faster
0B	Test the first 256K DRAM
09	OEM specific cache initialization (if needed)
0A	<ol style="list-style-type: none"> <li>1. Initialize the first 32 interrupt vectors with corresponding interrupt handlers initialize INT numbers from 33- 20 with Dummy (Spurious Interrupt Handler)</li> <li>2. Issue CPUID instruction to identify CPU type</li> <li>3. Early Power Management initialization (OEM specific)</li> </ol>
0E	<ol style="list-style-type: none"> <li>1. Verify the RTC time is valid or not</li> <li>2. Detect bad battery</li> <li>3. Read CMOS data into BIOS stack area</li> <li>4. PnP initializations including (PnP BIOS only)                Assign CSN to PnP ISA card                Create resource map from ESCD</li> <li>5. Assign IO &amp; Memory for PCI devices (PC BIOS only)</li> </ol>



0C	Initialization of the BIOS Data Area (40:00 - 40:FF)
0D	<ol style="list-style-type: none"> <li>1. Program some of the Chipset's value according to Setup. (Early Setup Value Program)</li> <li>2. Measure CPU speed for display &amp; decide the system clock speed.</li> <li>3. Video initialization including Monochrome, CGA, EGA/VGA. If no display device found, the speaker will beep.</li> </ol>
0E	<ol style="list-style-type: none"> <li>1. Test video RAM. (If Monochrome display device found)</li> <li>2. Show messages including: <ul style="list-style-type: none"> <li>- Award Logo, Copyright string, BIOS Data code &amp; Part No.</li> <li>- OEM specific sign on messages</li> <li>- Energy Star Logo. (Green BIOS ONLY)</li> <li>- CPU brand, type &amp; speed.</li> <li>- Test system BIOS checksum. (Non-Compress Version only)</li> </ul> </li> </ol>
0F	DMA channel 0 test.
10	DMA channel 1 test.
11	DMA page registers test.
12-13	Reserved.
14	Test 8254 Timer 0 Counter 2.
15	Test 8259 interrupt mask bits for channel 1.
16	Test 8259 interrupt mask bits for channel 2.
17	Reserved.
19	Test 8259 functionality
1A-1D	Reserved.
1E	If EISA NVM checksum is good, execute EISA initialization (EISA BIOS only)
1F-29	Reserved.
30	Detect Base Memory & Extended Memory Size
31	<ol style="list-style-type: none"> <li>1. Test Base Memory from 256K to 640K.</li> <li>2. Test Extended Memory from 1M to the top of memory</li> </ol>
32	<ol style="list-style-type: none"> <li>1. Display the Award Plug &amp; Play BIOS Extension message (PnP BIOS only)</li> <li>2. Program all onboard super I/O chips (if any) including COM ports, LPT ports, FDD port ... according to setup value.</li> </ol>
33-3B	Reserved.
3C	Set flag to allow users to enter CMOS Setup Utility
3D	<ol style="list-style-type: none"> <li>1. Initialize Keyboard</li> <li>2. Install PS2 mouse.</li> </ol>

3E	Try to turn on Level 2 cache. <b>Note:</b> Some chipset may need to turn on the L2 cache in this stage. But usually, the cache is turn on later in POST 61h.
3F-4D	Reserved.
BF	1. Program the rest of the Chipset's value according to Setup. (Later Setup Value Program)
41	2. If auto-configuration is enabled, program the chipset with pre-defined Values
42	Initialize floppy disk drive controller
43	Initialize Hard drive controller
45	If it is a PnP BIOS, initialize serial & parallel ports
44	Reserved.
45	Initialize math coprocessor.
46-4D	Reserved.
4E	If there is any error detected (such as video, kb...), show all error messages on the screen & wait for user to press <F1> key
4F	1. If password is needed, ask for password. 2. Clear the Energy Star Logo. (Green BIOS only)
50	Write all CMOS values currently in the BIOS stack area back into the CMOS.
51	Reserved.
52	1. Initialize all ISA ROMs. 2. Later PCI initializations. (PCI BIOS only) - assign IRQ to PCI devices - initialize all PCI ROMs 3. PnP Initializations. (PnP BIOS only) - assign IO, Memory, IRQ & DMA to PnP ISA devices. - initialize all PnP ISA ROMs 4. Program shadows RAM according to Setup settings. 5. Program parity according to Setup setting. 6. Power Management Initialization - Enable/Disable global PM. - APM interface initialization.
53	1. If it is NOT a PnP BIOS, initialize serial & parallel ports 2. Initialize time value in BIOS data area by translate the RTC time value into a timer tick value
60	Setup Virus Protection (Boot Sector Protection) functionality according to Setup setting.

61	<ol style="list-style-type: none"> <li>1. Try to turn on Level 2 cache.</li> </ol> <p>Note: If L2 cache is already turned on in POST 3D, this part will be skipped.</p> <ol style="list-style-type: none"> <li>2. Set the boot up speed according to Setup setting.</li> <li>3. Last chance for Chipset initialization.</li> <li>4. Last chance for Power Management initialization. (Green BIOS only)</li> <li>5. Show the system configuration table.</li> </ol>
62	<ol style="list-style-type: none"> <li>1. Setup daylight saving according to Setup value.</li> <li>2. Program the NUM Lock, typematic rate &amp; typematic speed according to Setup setting.</li> </ol>
63	<ol style="list-style-type: none"> <li>1. If there is any changes in the hardware configuration, update the ESD information. (PnP BIOS only)</li> <li>2. Clear memory that have been used.</li> <li>3. Boot system via INT 19H.</li> </ol>
FF	System Booting. This means that the BIOS already pass the control right to the operating system.

## B-2 Unexpected Errors:

POST (hex)	DESCRIPTION
B0	If interrupt occurs in protected mode
B1	Unclaimed NMI occurs 0

## Appendix C

**NOTE:**

The "LOAD SETUP DEFAULTS" function loads the system default data directly from ROM and initializes the associated hardware properly. This function will be necessary when you accept this motherboard, or the system CMOS data is corrupted.

ROMPCI/ISA BIOS(2A69KPA9)  
CMOS SETUP UTILITY  
AWARD SOFTWARE INC

STANDARD CMOS SETUP	SUPERVISOR PASSWORD
BIOS FEATURES SETUP	USER PASSWORD
CHIPSET FEATURES SETUP	IDE HDD AUTO DETECTION
POWER MANAGEMENT SETUP	HDD LOW LEVEL FORMAT
PNP/PCI CONFIGURATION	Load SETUP Default(Y/N)? Y
INTEGRATED PERIPHERALS	ETUP
LOAD SETUP DEFAULTS	SAVING
ESC: QUIT	↑ ↓ → SELECT ITEM
F10: Save & Exit Setup	(Shift) F2 : Change Color
Load Setup Defaults Except Standard CMOS SETUP	

### LOAD SETUP DEFAULTS